



Lowering Costs Through Unique Solutions

AMERIGLOBE


Untying Discharge Spout of Filled FIBC

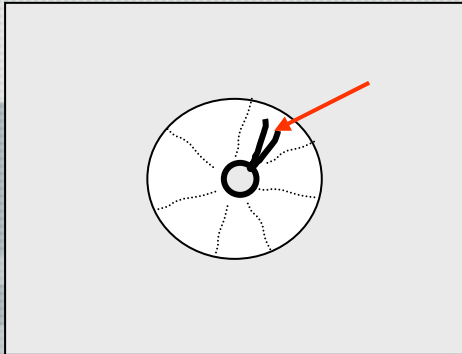

Operator will grasp the two ends of the spout cover ties and pull in opposite directions. Open cover to release spout.

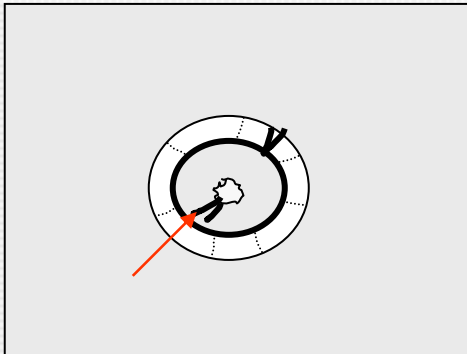

Pull spout down, free of spout cover. Align spout over the receiving device. Pull both ends of the spout tie in opposite directions, gravity will start the flow of the product.

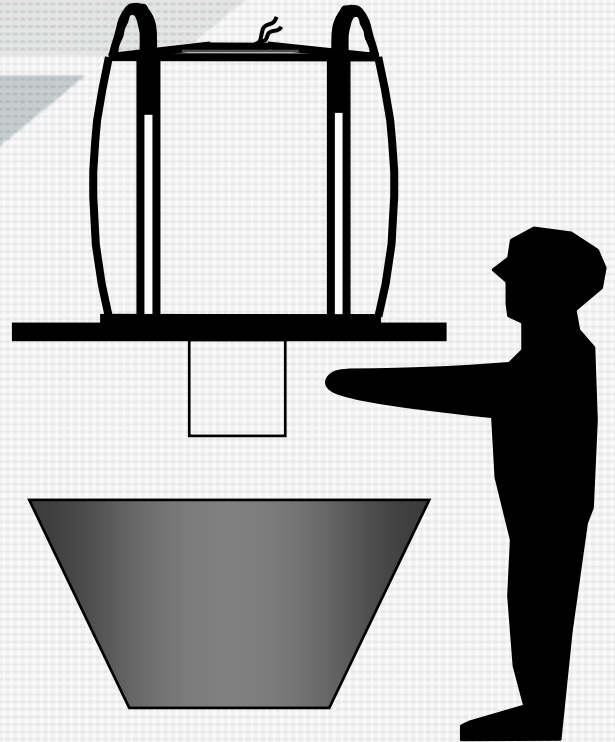

The bottom discharge spout should be opened only when the FIBC is suspended over a Safety support which will prevent injury to the operator in the event of a failure of the lifting device.

Most companies claim to offer better bag prices. AmeriGlobe's systematic approach lets us find ways to save you money. Whether it is creating instruction packets for your team or creating unique designs, we work to lower your costs. Call AmeriGlobe today to find out what we can do for you.